



Top Panel  
3/32" from die edges

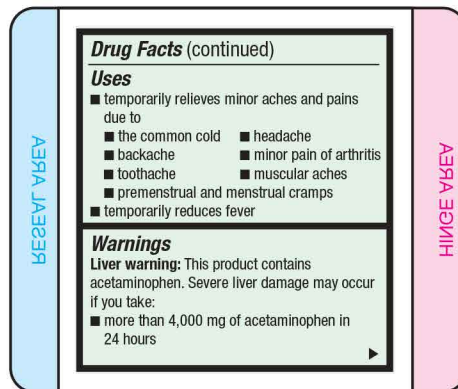

Back  
1/8" from die edges

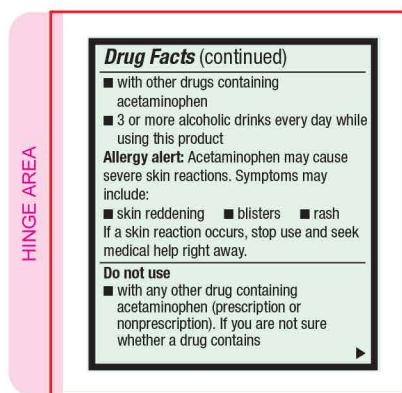


Insert 1 Top  
1/8" from die edges




Insert 1 Back  
1/8" from die edges



Insert 2 Top  
1/8" from die edges

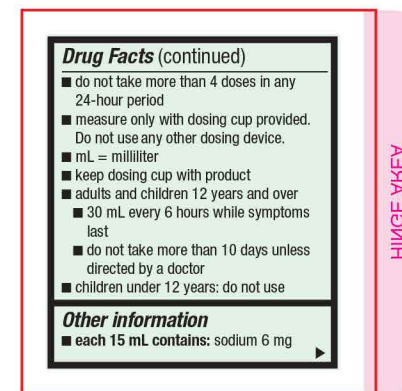

Insert 2 Back  
1/8" from die edges

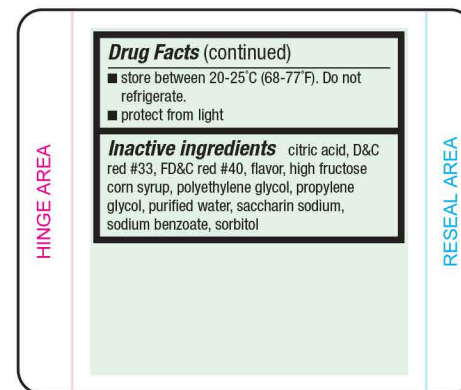

Base  
3/32" from die edges